




Huawei P9 Headphone Jack Replacement

Replace the headphone jack in your Huawei P9 smartphone.

Written By: Tobias Isakeit

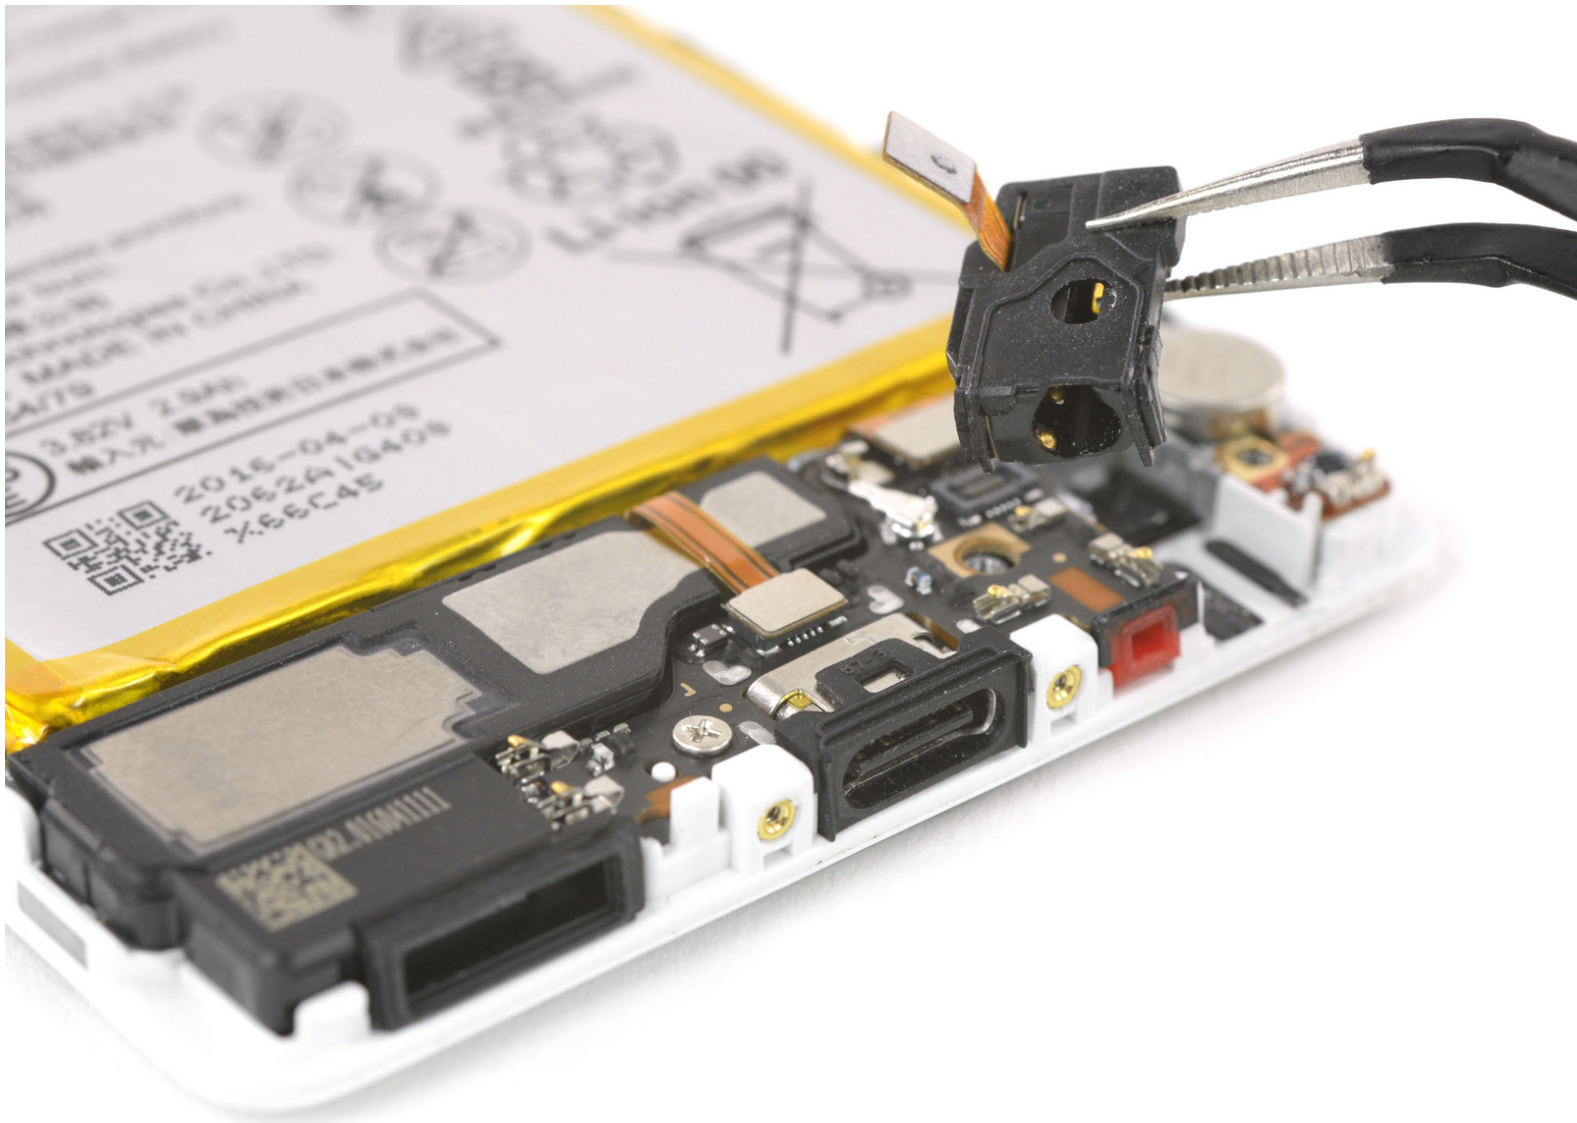

INTRODUCTION

Use this guide to replace the headphone jack in your Huawei P9 smartphone.



TOOLS:

- [SIM Card Eject Tool](#) (1)
 - [Spudger](#) (1)
 - [Tweezers - Pro/ESD/Angled](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [iSclack](#) (1)
 - [P2 Pentalobe Screwdriver iPhone](#) (1)
-

Step 1 — Back Cover




- First switch off your phone and remove the SIM card tray.
- Unscrew the two Pentalobe P2 screws located at the bottom next to the device's USB C port.
- ⓘ If the screen is cracked you might want to use some tape to protect your eyes from glass shreds and get a better grip to open the phone.

Step 2




- Use an iSclack or a suction handle to separate the display unit from the rear panel.
- ⚠ Don't remove the rear panel completely yet. There is a cable connected to it! It is running from the finger print sensor to the display unit.

Step 3 — finger print sensor

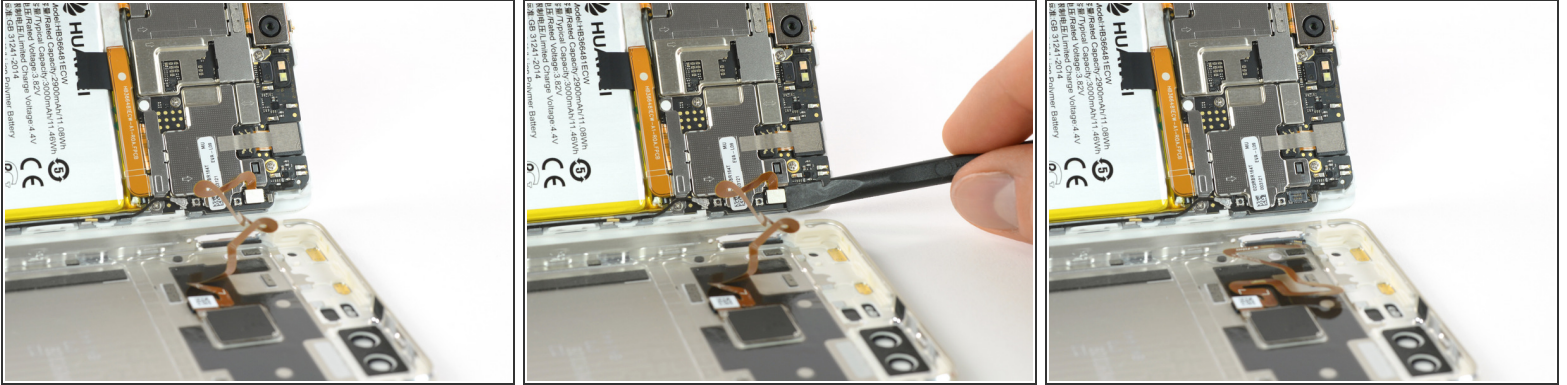



- Disconnect the finger print sensor using a spudger.

Step 4 — Headphone Jack

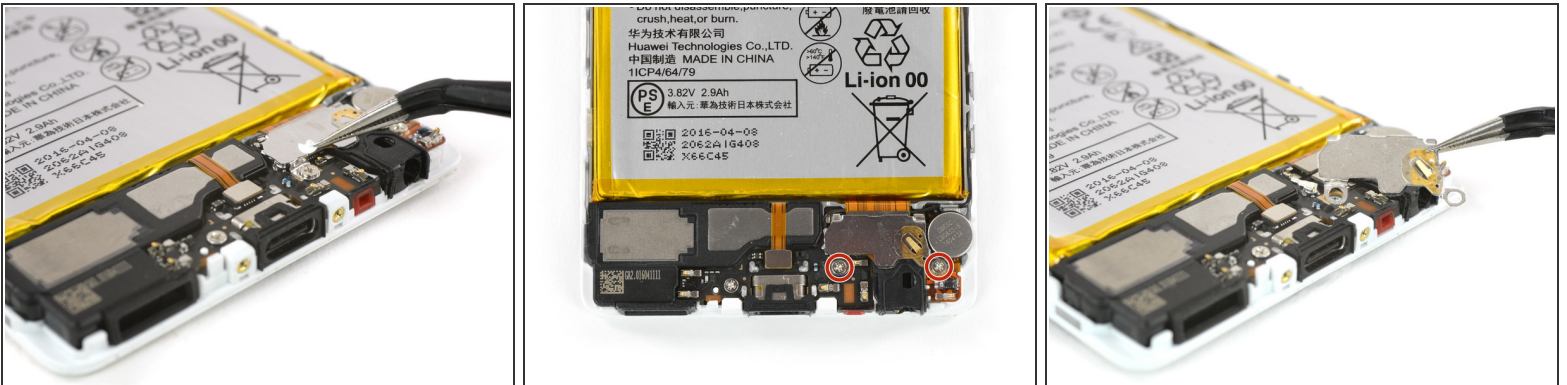

- Remove the water indicator on top of the screw.
- Undo the two Phillips #000 screws.
- Remove metal bracket (mind the adhesive underneath).

Step 5

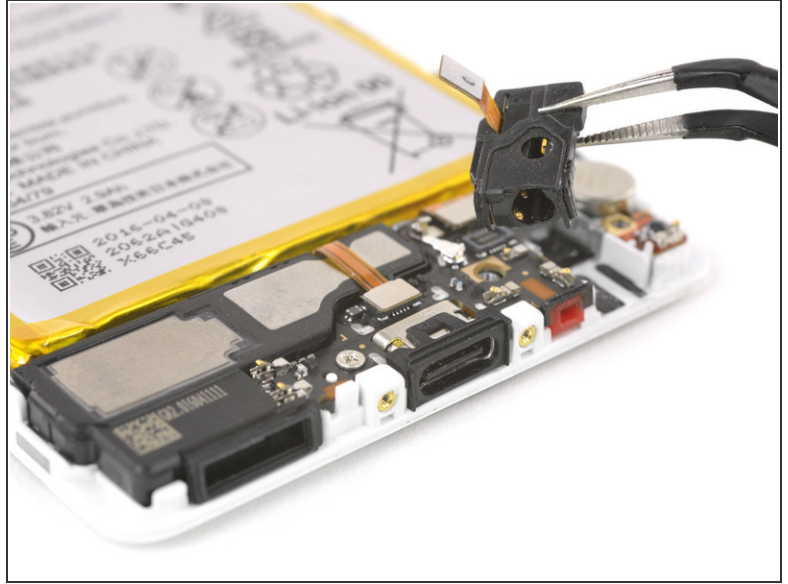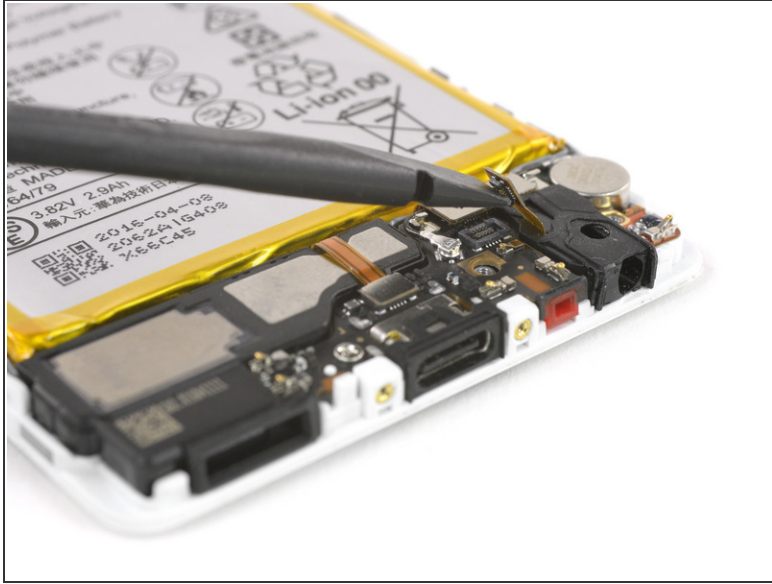

- Disconnect the flex cable and remove the headphone jack.
- ⓘ The old headphone jack is equipped with a rubber seal, which holds the jack down to the phone. Take it off and put it on the new headphone jack.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-12 02:45:44 PM.